

1.




Tap Casters into place on Uprights

(2) Locking in front (2) Non-Locking in back



When vertical, the uprights will be towards the rear of the stand, with the majority of the base depth at the front.

2.

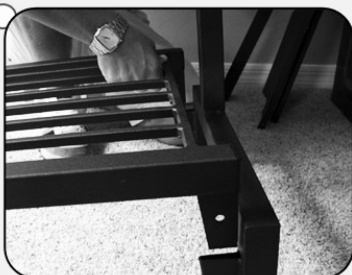

Install Lower Shelf / Pressure Fit / No Bolts

3.

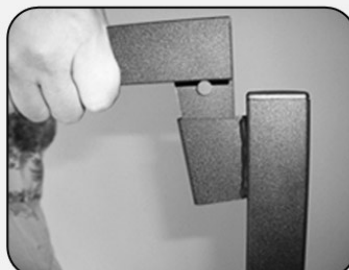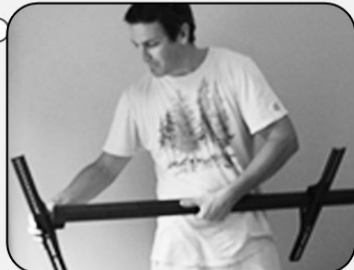


Slide TV Brackets over the Rail and install on Brackets.

Pressure Fit/ No Bolts. The flat part of the brackets should face forward.

4.




Install Middle Shelf / Pressure Fit / No Bolts

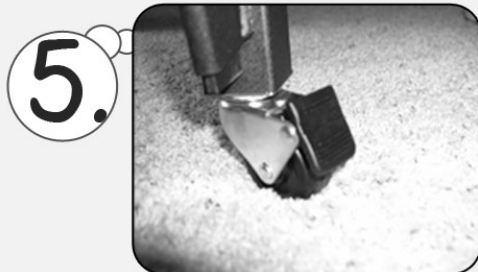

Lock Front Casters

(Important to make sure casters are locked)

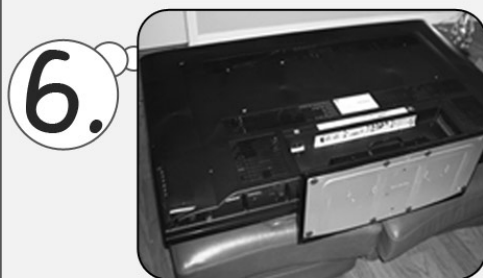

Set TV Face Down Onto Soft Surface

(cushions, ottoman, couch, 14" - 18" off the ground is ideal)

**Remove Table Stand if previously installed
(if applicable)**



Tilt Cart onto Back of TV

**Line up Bolts holes on TV by sliding Brackets
or adjusting Cart.**

**Install appropriate bolts (and spacers, if used)
to secure TV to stand.**


See diagram on page 3

8.



Lift TV & Cart To Upright Position (requires two people)

9.

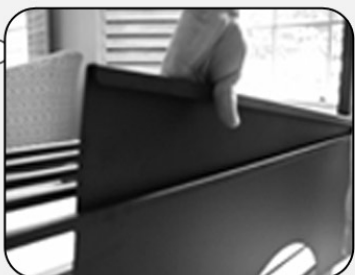

You May Wire Components To Your TV Before Setting Vanity Plates Over Horizontal Rails (Pressure Fit)

Bolt Package Contains:

- 4 x 10mm, 8mm, 6mm (Long & short bolts)
- 4 x Large Washers
- 8 x Small Washers
- 4 x Locking Washers (For each size)
- 4 x Bolt Extenders (For curved back TV's)



Large Washers



Locking Washers




Small Washers



Bolt Extenders



Long & Short Bolts

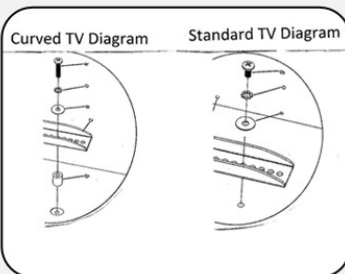

Hardware Instructions For Flat Panel Cart

1. Determine which size bolt fit the back of your TV.
2. Bolt extenders are used if the back of the TV is curved. If not curved, then disregard, and use the short bolts.
3. Use both the flat washers and the locking washers when fastening the stand to the back of the TV.
4. Extra bolts go to your tool box.